

TRANSOM TRIM CONTROL INSTALLATION AND MAINTENANCE NOTICE

We recommend a full service marine dealer install this product to insure proper fit and trouble free operation. These instructions should be placed with product for the owners future use.

WARNING: Disconnect all battery cables at battery before attempting to install this product.

STEP 1: Determine a location for Transom Trim Control that has no obstructions behind location that can be damaged when holes are drilled, screws are installed or wire is routed.

STEP 2: Drill 3/8" dia. hole for wire to pass thru. This hole should be free of sharp edge to prevent damage to wiring.

STEP 3: Mount Transom Trim Control, with two (2) #6 screws (not furnished). Do not overtighten screws.

STEP 4: Connect purple wire from Transom Trim Control to purple wire in trim harness. This wire should be fused with fuse of proper size for trim unit. (Fuse assembly not furnished)

STEP 5: Connect green wire from Transom Trim Control to green wire in trim harness.

STEP 6: Connect blue wire from Transom Trim Control to blue wire in trim harness.

NOTE: All electrical connections should be protected with tape or rubber covering to prevent possible shorting.

STEP 7: Reconnect all battery cables and check for proper operation.

MAINTENANCE INSTRUCTIONS:

Maintenance inspection is the owners responsibility and must be performed as follows:

NORMAL SERVICE: Every 50 hours of operation.

SEVERE SERVICE: Every 25 hours of operation.

NOTE: Operation in salt water areas is considered "SEVERE SERVICE."

1. Check mounting hardware for adequate tightness.
2. Check all electrical connections.
3. Check wire for abrasions or cuts, replace if necessary.