



seachoice.com



AUTO TO MANUAL-ONLY INFLATION INSTRUCTIONS

HOW TO CONVERT YOUR INFLATABLE PFD FROM AUTOMATIC TO MANUAL

INSTALLATION OF MANUAL CAP

CAUTION: Carefully follow the directions below to maintain the inflator integrity.

1. Slide up the Manual cap ring over the inflator with the yellow cap facing down (Illustration #1). Clear cap (automatic cap) might need to be removed first. If removed put clear cap back on inflator.
2. Twist and push the yellow cap over the automatic inflator cap till the manual cap can go on no further (Illustration #2).
3. Remove cylinder, inspect cylinder face (Illustration #3). If cylinder face has no holes then tighten firmly in inflator. Do not over tighten & make sure green indicator clip is in place (Illustration 4). See steps 8 & 9 of the V90000 Service Instructions for complete cylinder instructions.
4. During the repacking of the vest place the manual conversion tag so that it is visible outside of the vest.

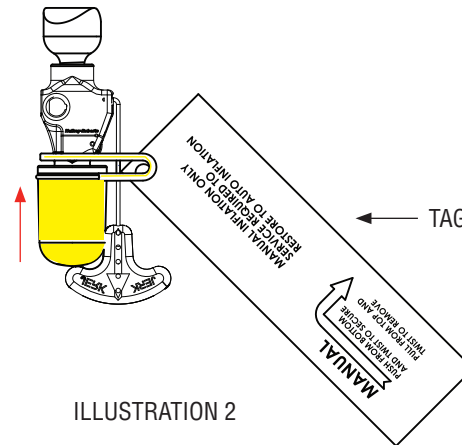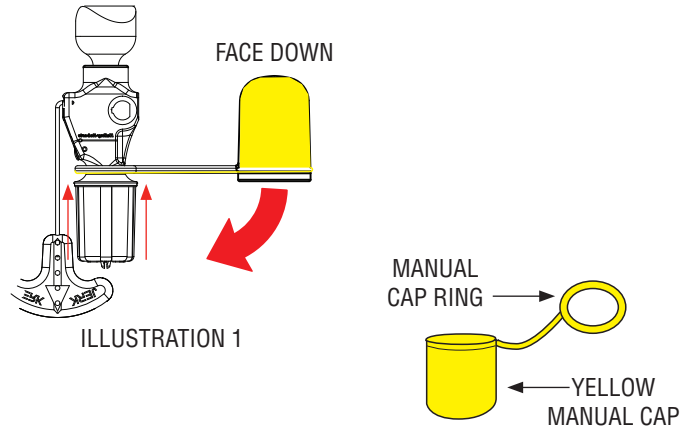

REMOVAL OF THE MANUAL CAP:

1. Detach and pull the cap away from the automatic inflator, until the manual cap slides off.

