




MODEL 53851 LOCKABLE SPARE TIRE CARRIER

INSTALLATION INSTRUCTIONS

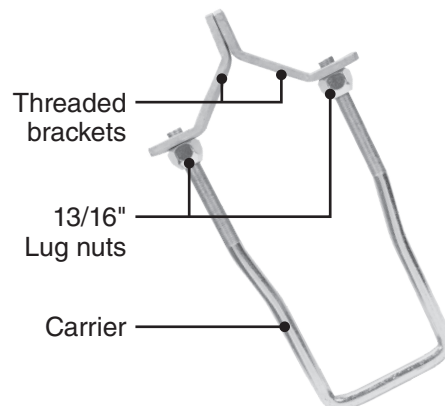

STEP 1:

Position the spare tire over the trailer tongue or frame in an area that will not interfere with winch operation or impede any part of trailer functionality.



STEP 5:

Tighten the lug nuts with a 13/16-inch wrench or socket.



STEP 2:

Remove the brackets and lug nuts from the spare tire carrier. From underneath the trailer, position the carrier so that it fits snug against the bottom of the tongue or frame.



STEP 6:

Locate the threaded hole in one of the provided brackets and twist it clockwise onto one of the threaded ends of the carrier. Repeat with the other bracket. Take care not to damage the threads.



STEP 3:

Make sure both threaded ends of the spare tire carrier protrude through lug holes on the rim.



STEP 7:

Finger tighten both brackets, and position the bracket top holes so that they are aligned. Insert the padlock shackle through the holes (*padlock is not included*).



STEP 4:

Screw the provided lug nuts onto the threaded ends of the carrier.



STEP 8:

Lock the padlock. Your lockable spare tire carrier is now installed.